



Baffin Tent Assembly Instructions



Read instructions before assembly
Practice putting up your tent before your first camping trip



Warning!

Keep all flame and heat sources away from all tent components. This tent is made of flame-resistant fabric. ***It is not fireproof.*** The fabric will burn if left in contact with an open flame source.

Important Information

The following precautions should be taken when camping:

- Do not use candles, matches or open flames of any kind in or near your tent.
 - Do not cook inside a tent.
 - Build campfires downwind and several meters away from the tent and be sure to fully extinguish campfires before retiring for the night.
 - Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery operated equipment whenever possible.
 - Do not refuel lamps, heaters or stoves inside a tent.
 - Extinguish or turn off all lanterns before going to sleep.
 - Do not smoke in a tent.
 - Do not store flammable liquids inside a tent.
-

Assembly Instructions

Step 1 – First assemble the 5 fiberglass shock corded pole assemblies.
(There are two long (black), two long (grey) and one short (grey))

Step 2 – Spread the inner tent flat on the ground.
(Do not peg the corners.)

Step 3 – Take the 2 long black pole assemblies and insert them one by one into the diagonal tent sleeves located at the corners of the inner tent. Secure the pole ends into the eyelet on the attached webbings located on the corners of the inner tent. Grasping the end of the pole that is not secured in the eyelet and the webbing strap on the inner tent; push on the pole and pull on the webbing. This will cause the tent pole to arc and the middle of the tent to rise into shape. Insert the end of the other tent pole in your grasp in to the eyelet in the webbing in your other hand. At each corner of the tent, attach the inner tent to the pole assemblies using the quick clips.

Step 4 – Take the 2 long grey pole assemblies and insert them into the sleeves on each side of the tent. Secure and set-up the grey poles in the same way as described for the long black poles. The eyelets and straps located at the base of the tent between the door and the corner and between the window on the back of the tent. These poles will cause each side to rise in to the tents final shape.

Step 5 – Stake down the inner tent to the ground by inserting the pegs into the remaining eyelets at each corner of the tent.
(For greater stability drive the tent pegs into the ground at an angle to the tent.)

Step 6 – Assemble the remaining shorter fiberglass pole. Place it underneath the inside of the top of the flysheet and insert the pole ends inside the two visible webbing pockets. You may have to flex the pole somewhat to get this done. Both ends of the top of the fly sheet have a small opening to let this pole pass through.

Step 7 – Place the flysheet over the assembled inner tent, and secure each corner of the fly by clipping the “S” hook provided on the end of each elastic bungee into the rings at each corner.

Step 8 – Use the provided guy ropes to secure the tent and improve stability. Stake the guy ropes down at each side of the tent. The plastic stoppers on the ropes can slide up and down to increase or decrease tension. Increase tension somewhat in high winds, decrease tension when the tent is wet.

Tip: The stakes provided with this tent are designed to work well on normal grass covered ground. If up on rocky terrain, it is advisable to use specifically designed heavy-duty stakes, available at most stores.

Troubleshooting Guide

Problem: Condensation

Solution: This happens when the air inside the tent is warmer than that outside. Open all your doors and windows to provide maximum ventilation.

Problem: Mildew and Odor

Solution: This is caused by dampness. Never store your tent while it is still wet. If mildew does occur, use a soft brush or a sponge along with mild dish soap. Let the tent dry thoroughly in the sunlight after washing.

Problem: Faulty zipper

Solution: Our tents come with self-repairing zippers. If the zipper separates, you can usually move the slider to the beginning of the zipper tape and rework the zipper. If this does not work, a replacement zipper can be ordered from our parts department and installed by any awning repair shop.

Problem: Seam leakage

Solution: Our tents are all seam sealed to keep out rainwater. However; over time this seam seal tape can become brittle and not as supple. Go to any camping store and buy a product called seam sealer and apply a generous amount along the leaking seam. This should solve this problem.

Problem: Removing stakes or pegs

Solution: Always bring along a spare hammer or stake puller on your trip. Never remove stakes by pulling with the inner tent or flysheet.

Problem: Fading fabric

Solution: This is a sign of Ultra-violet damage from extended periods in the sun. Avoid leaving your tent up in the sun when not in use.

Problem: Repairing a tear

Solution: For small tears use a self adhesive patch kit available at any camping store.

Problem: Broken elastic cord on a pole set

Solution: Usually elastic can be re-threaded using a piece of wire. This can often be avoided by taking extra care when removing the pole assembly from the clip or sleeve. Push the assembly through from one end, rather than pulling from the other end. Repair kits are also available at most camping stores.

Service & Warranty

Congratulations for having purchased an OutdoorWorks tent.

If treated properly, your tent will provide years of trouble free fun and enjoyment. Your tent is covered by a 12 month limited warranty and for problems beyond that time; we do stock spare parts which we can provide you at a nominal charge. Just call our toll free customer service line for help. Please have the tent model and description of the broken part ready for our customer service agents.

Toll free in **North America at 1-888-718-2288**

E-mail requests: info@infinity-outdoor.com

Twelve Month Limited Warranty

For twelve (12) months from the date of purchase, The Infinity Sports Group Ltd. will repair, or replace, at our discretion, any manufacturer's defect that appears on this OutdoorWorks product. UV Damage is not covered under the limited warranty. Please call Toll free in North America to 1-888-718-2288 for warranty assistance.

.....

The Infinity Sports Group Ltd.
27452 – 52nd Avenue,
Langley, B.C. Canada
V4W 4B2
E-Mail: info@infinity-outdoor.com